

Maxim Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



 
4 Seater Instructions

On the Maxim 4 Seater, there are 4 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Next, you will need to disconnect any electrical connections between individual seats (see the original assembly instructions if you are unsure where these cables are located). The heat pad cables are red and black wires with a white connector. **Disconnecting the cables between each centre seat and the console directly next to it disconnects the heating pad for that seat (2 of 4 disconnected).**

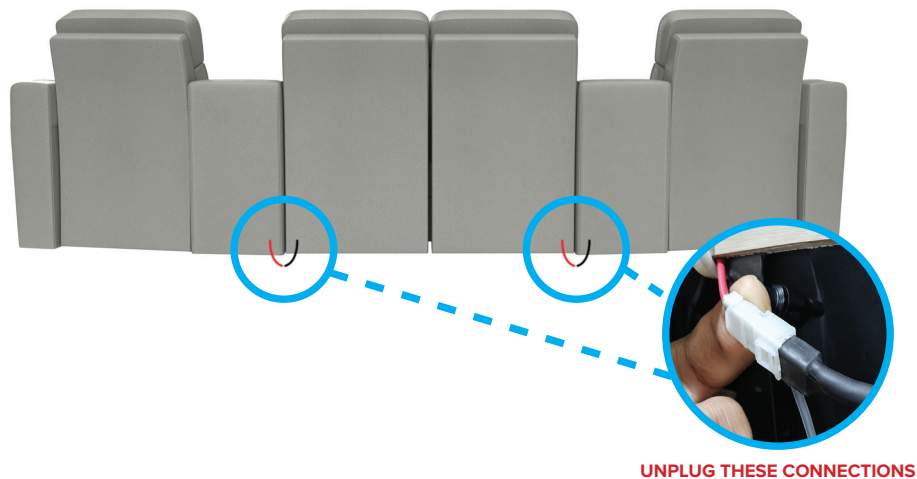

Detach the end seats from the center consoles to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

 
Step 2

With the end seats now detached from the center consoles, the end seats can be carefully tipped forward to allow access to the underside.



Step 3

On the underside of each end seat, there is zippered compartment under the armrest. Unzip this and locate the heat pad cables - red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the reclining end seat (3 of 4 disconnected)**

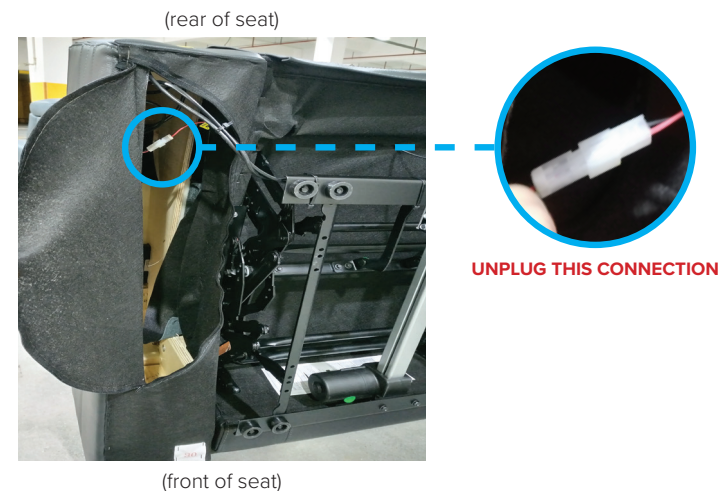

Repeat Step 3 on the end seat at the other end of the lounge as well. **(4 of 4 disconnected)**

Step 4

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Maxim Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



 
3 Seater Instructions

On the Maxim 3 Seater, there are 3 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Next, you will need to disconnect any electrical connections between individual seats (see the original assembly instructions if you are unsure where these cables are located). The heat pad cables are red and black wires with a white connector. **Disconnecting the cables between the centre seat and the console disconnects the heating pad for the centre seat (1 of 3 disconnected).**

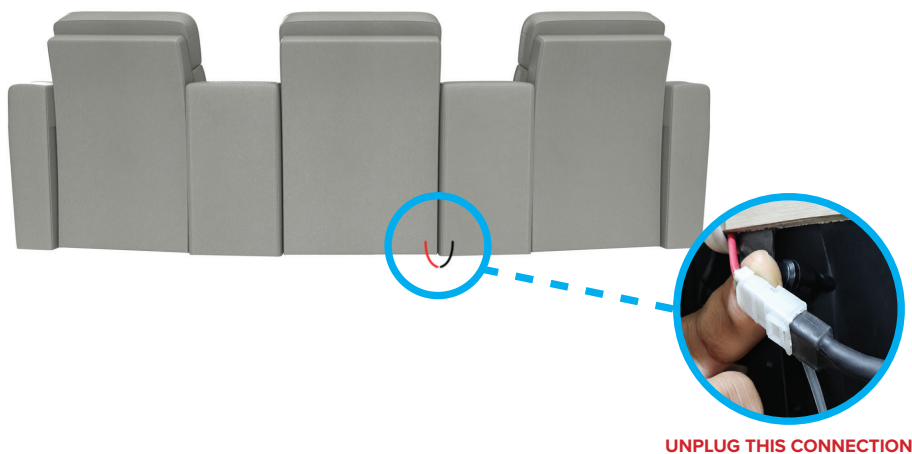

Detach the end seats from the center consoles to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

Step 2

With the end seats now detached from the center consoles, the end seats can be carefully tipped forward to allow access to the underside.



Step 3

On the underside of each end seat, there is zippered compartment under the armrest. Unzip this and locate the heat pad cables - red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the reclining end seat (2 of 3 disconnected)**



Repeat Step 3 on the end seat at the other end of the lounge as well. **(3 of 3 disconnected)**

Step 4

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Maxim Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



2 Seater Instructions

On the Maxim 2 Seater, there are 2 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Detach the individual seats from the centre console to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

 
Step 2

With the seat sections now detached from the centre console, the end seats can be carefully tipped forward to allow access to the underside.



Step 3

On the underside of each end seat, there is zippered compartment under the armrest. Unzip this and locate the heat pad cables - red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the reclining end seat (1 of 2 disconnected)**

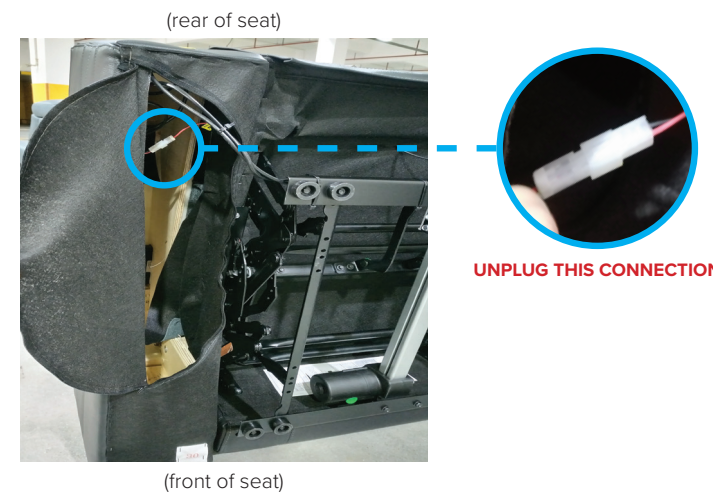

UNPLUG THIS CONNECTION

Repeat Step 3 on the end seat at the other end of the lounge as well. **(2 of 2 disconnected)**

Step 4

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Maxim Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



 
Recliner Instructions

On the Maxim Recliner, there is 1 heat pad to disconnect

Step 1

The first step is to unplug your lounge from the wall outlet.

Carefully tip the seat forward to allow access to the underside.

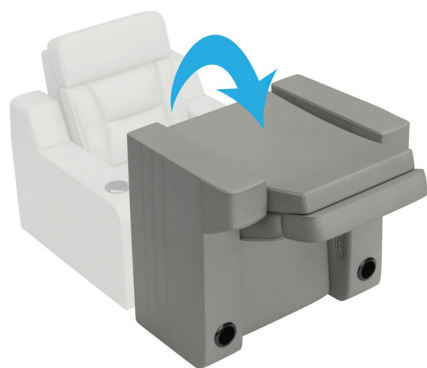

Step 2

On the underside of each end seat, there is zippered compartment under the armrest. Unzip this and locate the heat pad cables - red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the recliner chair (1 of 1 disconnected)**

