

Sierra Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



3 Seater + Chaise Instructions

On the Sierra 3 Seater + Chaise, there are 3 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Next, you will need to disconnect any electrical connections between individual seats (see the original assembly instructions if you are unsure where these cables are located). The heat pad cables are red and black wires with a white connector. **Disconnecting the cables between centre seat and reclining end seat disconnects the heating pad for the centre seat (1 of 3 disconnected).**



UNPLUG THIS CONNECTION

Detach the individual seats from one another to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

 
Step 2

With the seat sections now detached from one another, the end seat can be carefully tipped forward to allow access to the underside, and the chaise seat can be tipped onto its inner side - taking care that the seat clips do not mark your flooring.



Step 3

On the underside of the end seat, there is a cable connection tied to the metal mechanism. **Disconnect these cables to disable the heat pad on the reclining end seat (2 of 3 disconnected)**

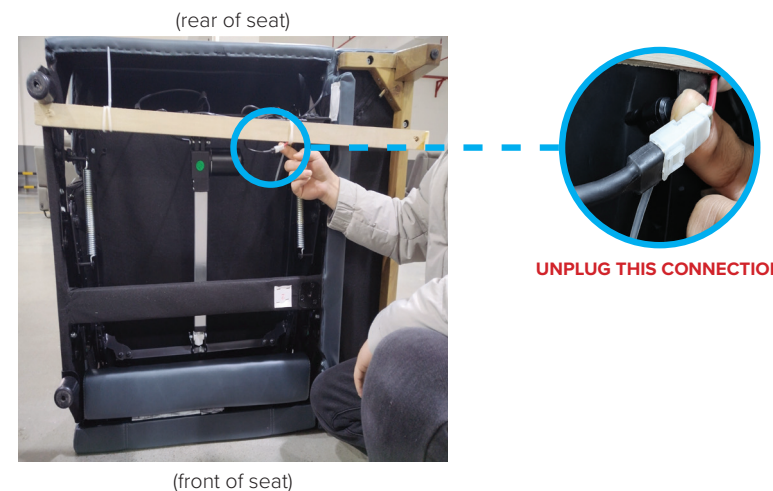

UNPLUG THIS CONNECTION

Step 4

On the underside of the chaise seat, there is zipper pocket at the rear of the seat. Unzip this and locate the heat pad cable inside the sofa frame. **Disconnect these cables to disable the heat pad on the chaise seat (3 of 3 disconnected)**



Step 5

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Sierra Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



3 Seater Instructions

On the Sierra 3 Seater, there are 3 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Next, you will need to disconnect any electrical connections between individual seats (see the original assembly instructions if you are unsure where these cables are located). The heat pad cables are red and black wires with a white connector. **Disconnecting the cables between centre seat and reclining end seat disconnects the heating pad for the centre seat (1 of 3 disconnected).**



Detach the individual seats from one another to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

 
Step 2

With the seat sections now detached from one another, the end seats can be carefully tipped forward to allow access to the underside.



Step 3

On the underside of each end seat, there is a cable connection tied to the metal mechanism. **Disconnect these cables to disable the heat pad on the reclining end seat (2 of 3 disconnected)**

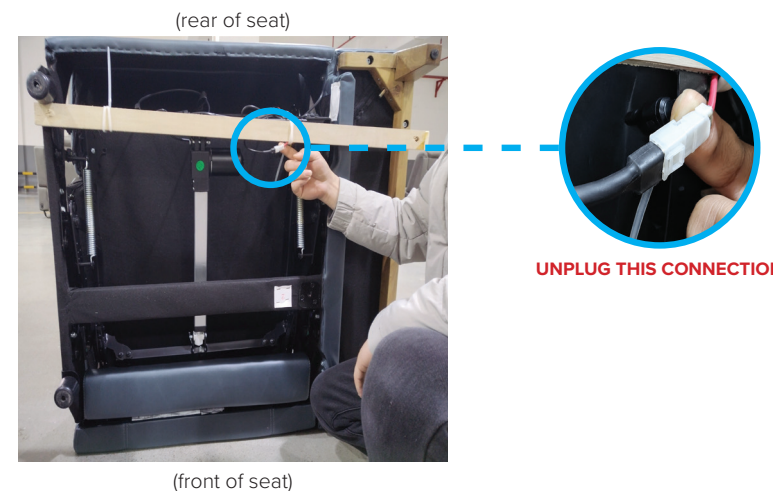

Repeat Step 3 on the end seat at the other end of the lounge as well. **(3 of 3 disconnected)**

Step 4

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Sierra Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



2.5 Seater Instructions

On the Sierra 2.5 Seater, there are 2 heat pads to disconnect; one for each seat.

Step 1

The first step is to unplug your lounge from the wall outlet.

Detach the individual seats from one another to allow best access for following steps. (See the original assembly instructions for where the seats are joined together)



Scan QR code to view the original assembly instructions online

 
Step 2

With the seat sections now detached from one another, the end seats can be carefully tipped forward to allow access to the underside.



Step 3

On the underside of each end seat, there is a cable connection tied to the metal mechanism. The heat pad cables are red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the reclining end seat (1 of 2 disconnected)**

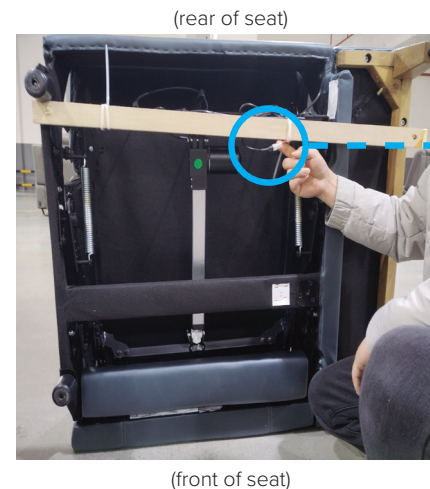

UNPLUG THIS CONNECTION

Repeat Step 3 on the other seat as well. **(2 of 2 disconnected)**

Step 4

Reassemble the lounge according to the assembly instructions, ensuring you do not reconnect the black and red heat pad cable disconnected in previous steps.

Sierra Lounge Heat Pad Disconnection Instructions

① The components are heavy, handling should be performed by two people.

For assistance or questions about these steps, please email heatpads@synargy.com with the subject line **Heat Pad**



Recliner Instructions

On the Sierra Recliner, there is 1 heat pad to disconnect

Step 1

 
The first step is to unplug your lounge from the wall outlet.

Carefully tip the seat forward to allow access to the underside.



Step 2

On the underside of the seat, there is a cable connection tied to the metal mechanism. The heat pad cables are red and black wires with a white connector. **Disconnect these cables to disable the heat pad on the recliner chair (1 of 1 disconnected)**

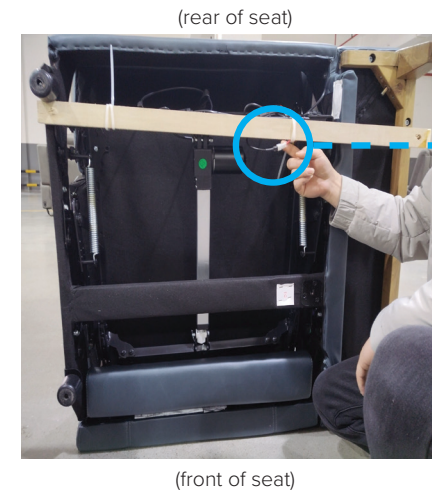

UNPLUG THIS CONNECTION