

 
**SMART**  
COMFORT

# DAISY

## AUDIO TABLE USER GUIDE



# POWER

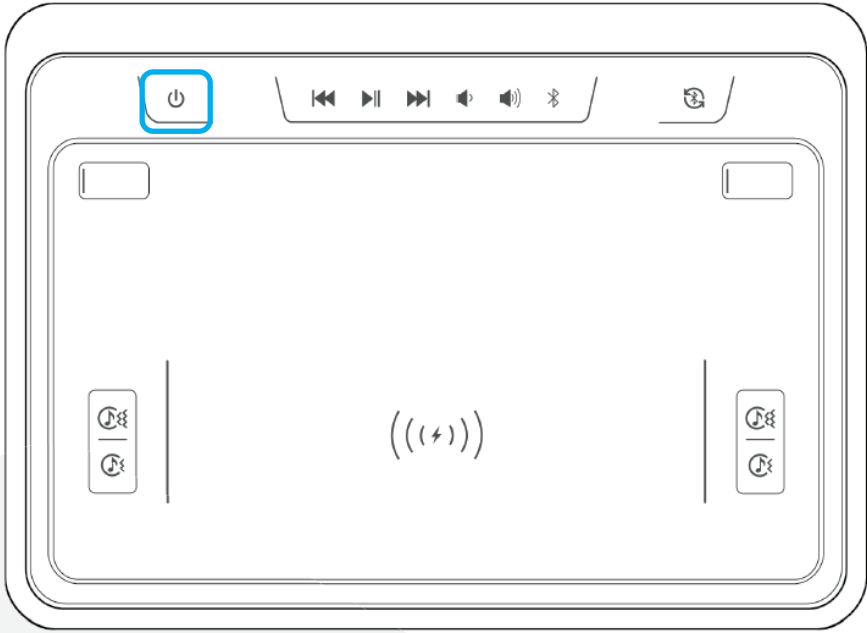

## Turning On/Off

Press and hold the power button  for 3 seconds to turn on or off.

## Change LED Backlight Colour


Tap the power button to cycle through different LED colours.

## Bluetooth Activation

Upon powering on, the Bluetooth function will automatically activate, indicated by the voice saying *“Wait for Bluetooth connection”*.

Bluetooth instructions are on the next page.

# BLUETOOTH

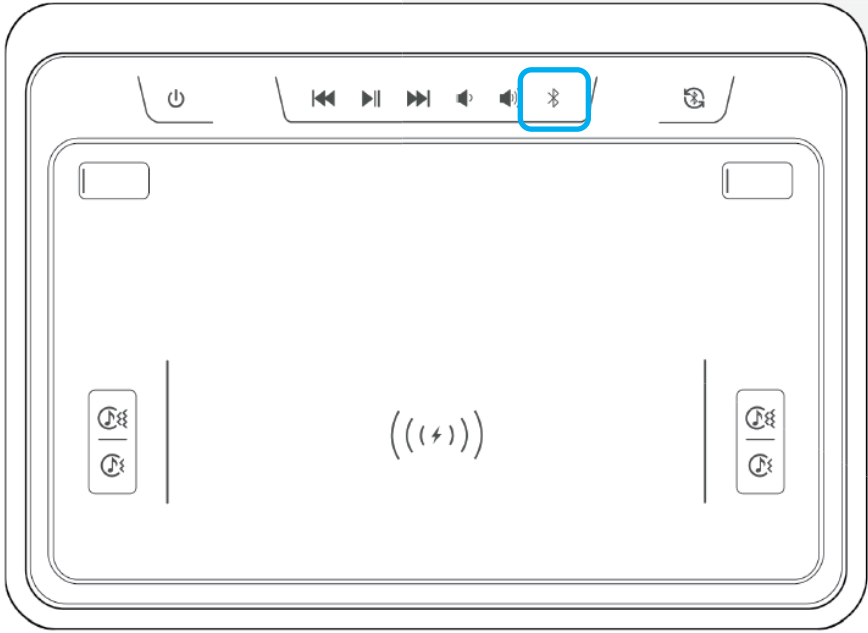

## Bluetooth Connection

When the power is on, the bluetooth function will automatically activate, indicated by the voice saying *“Wait for Bluetooth connection”*.

Browse for Bluetooth devices in the settings menu of your television, mobile phone, tablet or other source of audio.

Connect to the device named **Smart Comfort**. When the connection is successful, the voice will say *“Bluetooth connected”*.

The Bluetooth button  light will remain solid while connected.

You can also tap the Bluetooth button to manually turn the Bluetooth connection on or off. The voice will state *“Bluetooth off”* when turned off.

# SYNC MODE



## “Sync Mode” is Used To Link Lounge Suite Pieces Together

For example, connecting a chaise lounge to a two-seater and having them linked and playing the same audio.

One table can act as the primary table which can link up to a maximum of three secondary tables.

### Activating a primary table

With the power on and Bluetooth connected, first tap and hold the SYNC Mode button on the table you want set as the primary table. You will hear the voice prompt say *“Enter Sync Mode”* and the Sync button’s backlight will remain on.

### Adding a secondary table

After activating the primary table, tap the SYNC Mode button on the table of the next lounge suite piece - the one you would like to connect to the first piece. You should hear the voice prompt “Enter Sync mode”.

Once it finds the first piece, it will connect and the voice prompt will say “Sync mode succeed”. The Sync mode button backlight will blink slowly. **The secondary table(s) cannot control the audio playback - this must be done from the primary table.**

### **Automatic Reconnect**

If the audio table is powered off, it will automatically reconnect with the last used primary and secondary table connections when powered on again.

If Sync mode was turned off manually by pressing the button before powering down the table, you may need to set up the primary and secondary connections again using the steps on the previous page.


### **Changing Primary/Secondary Setup**

To change which lounge suite pieces have the primary or secondary audio tables set, repeat the setup steps on the previous page.

### **SYNC Mode Timeout**


If the primary audio table has Sync mode turned off while connected to other tables, the other tables will exit Sync mode after 60 seconds of no input. Turn Sync mode on using the Sync button on the primary panel to reconnect, or begin the setup steps again per previous page.

# PLAYBACK CONTROLS

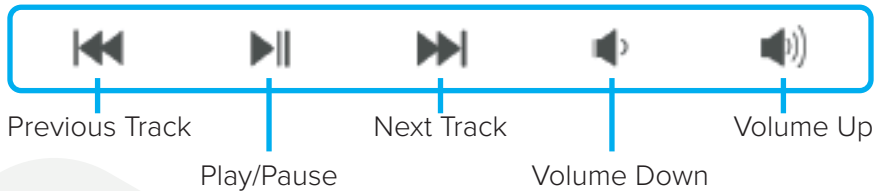

**Reminder:** playback controls will only work on Primary audio table.


# VIBRATION

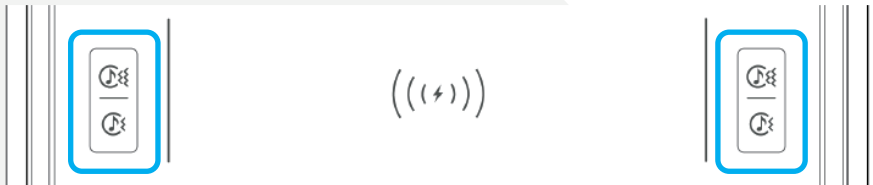 

Use the vibration up and down buttons to control the seat vibration intensity for the two end seats. Intensity is adjustable in 4 levels (individual button presses, do not hold the buttons down) and a beep will sound to indicate minimum or maximum level reached.

**Vibration will turn off after 3 hours.**
 
# WIRELESS CHARGER

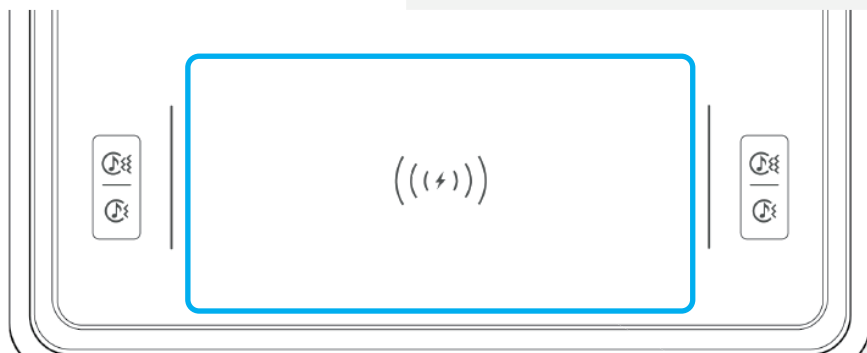

Place your wireless charging compatible phone over the center of the audio table to wirelessly charge. **5W wireless charge.**

# USB OUTLETS



There are sliding covers that provide access to two USB outlets for charging small devices such as mobile phones, tablets or e-readers. These are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.



# DAISY AUDIO TABLE

## Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

## Electrical Instructions

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.