

Lark Occasional Chair

Assembly Instructions





Α	X 16	M6X25mm
В	X 16	Ø6
С	X 16	Ø6/Ø16mm
D	X 1	
E	X 4	



Lark Occasional Chair

Assembly Instructions

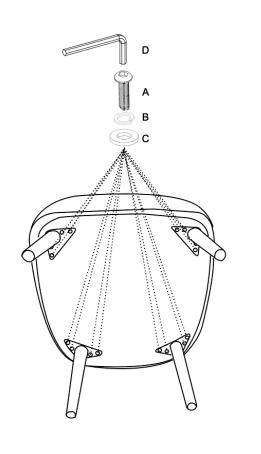

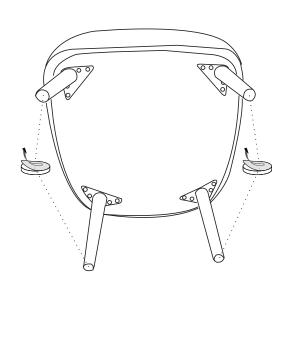

! PLEASE RE-CHECK ALL BOLTS HAVE BEEN SUFFICIENTLY TIGHTENED BEFORE OPERATING THE CHAIR!

