
 
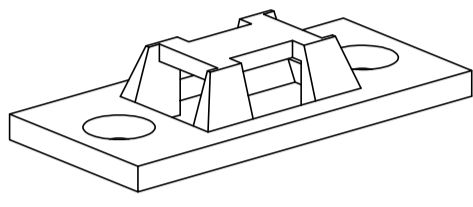

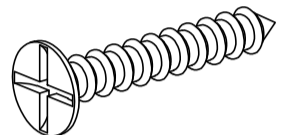
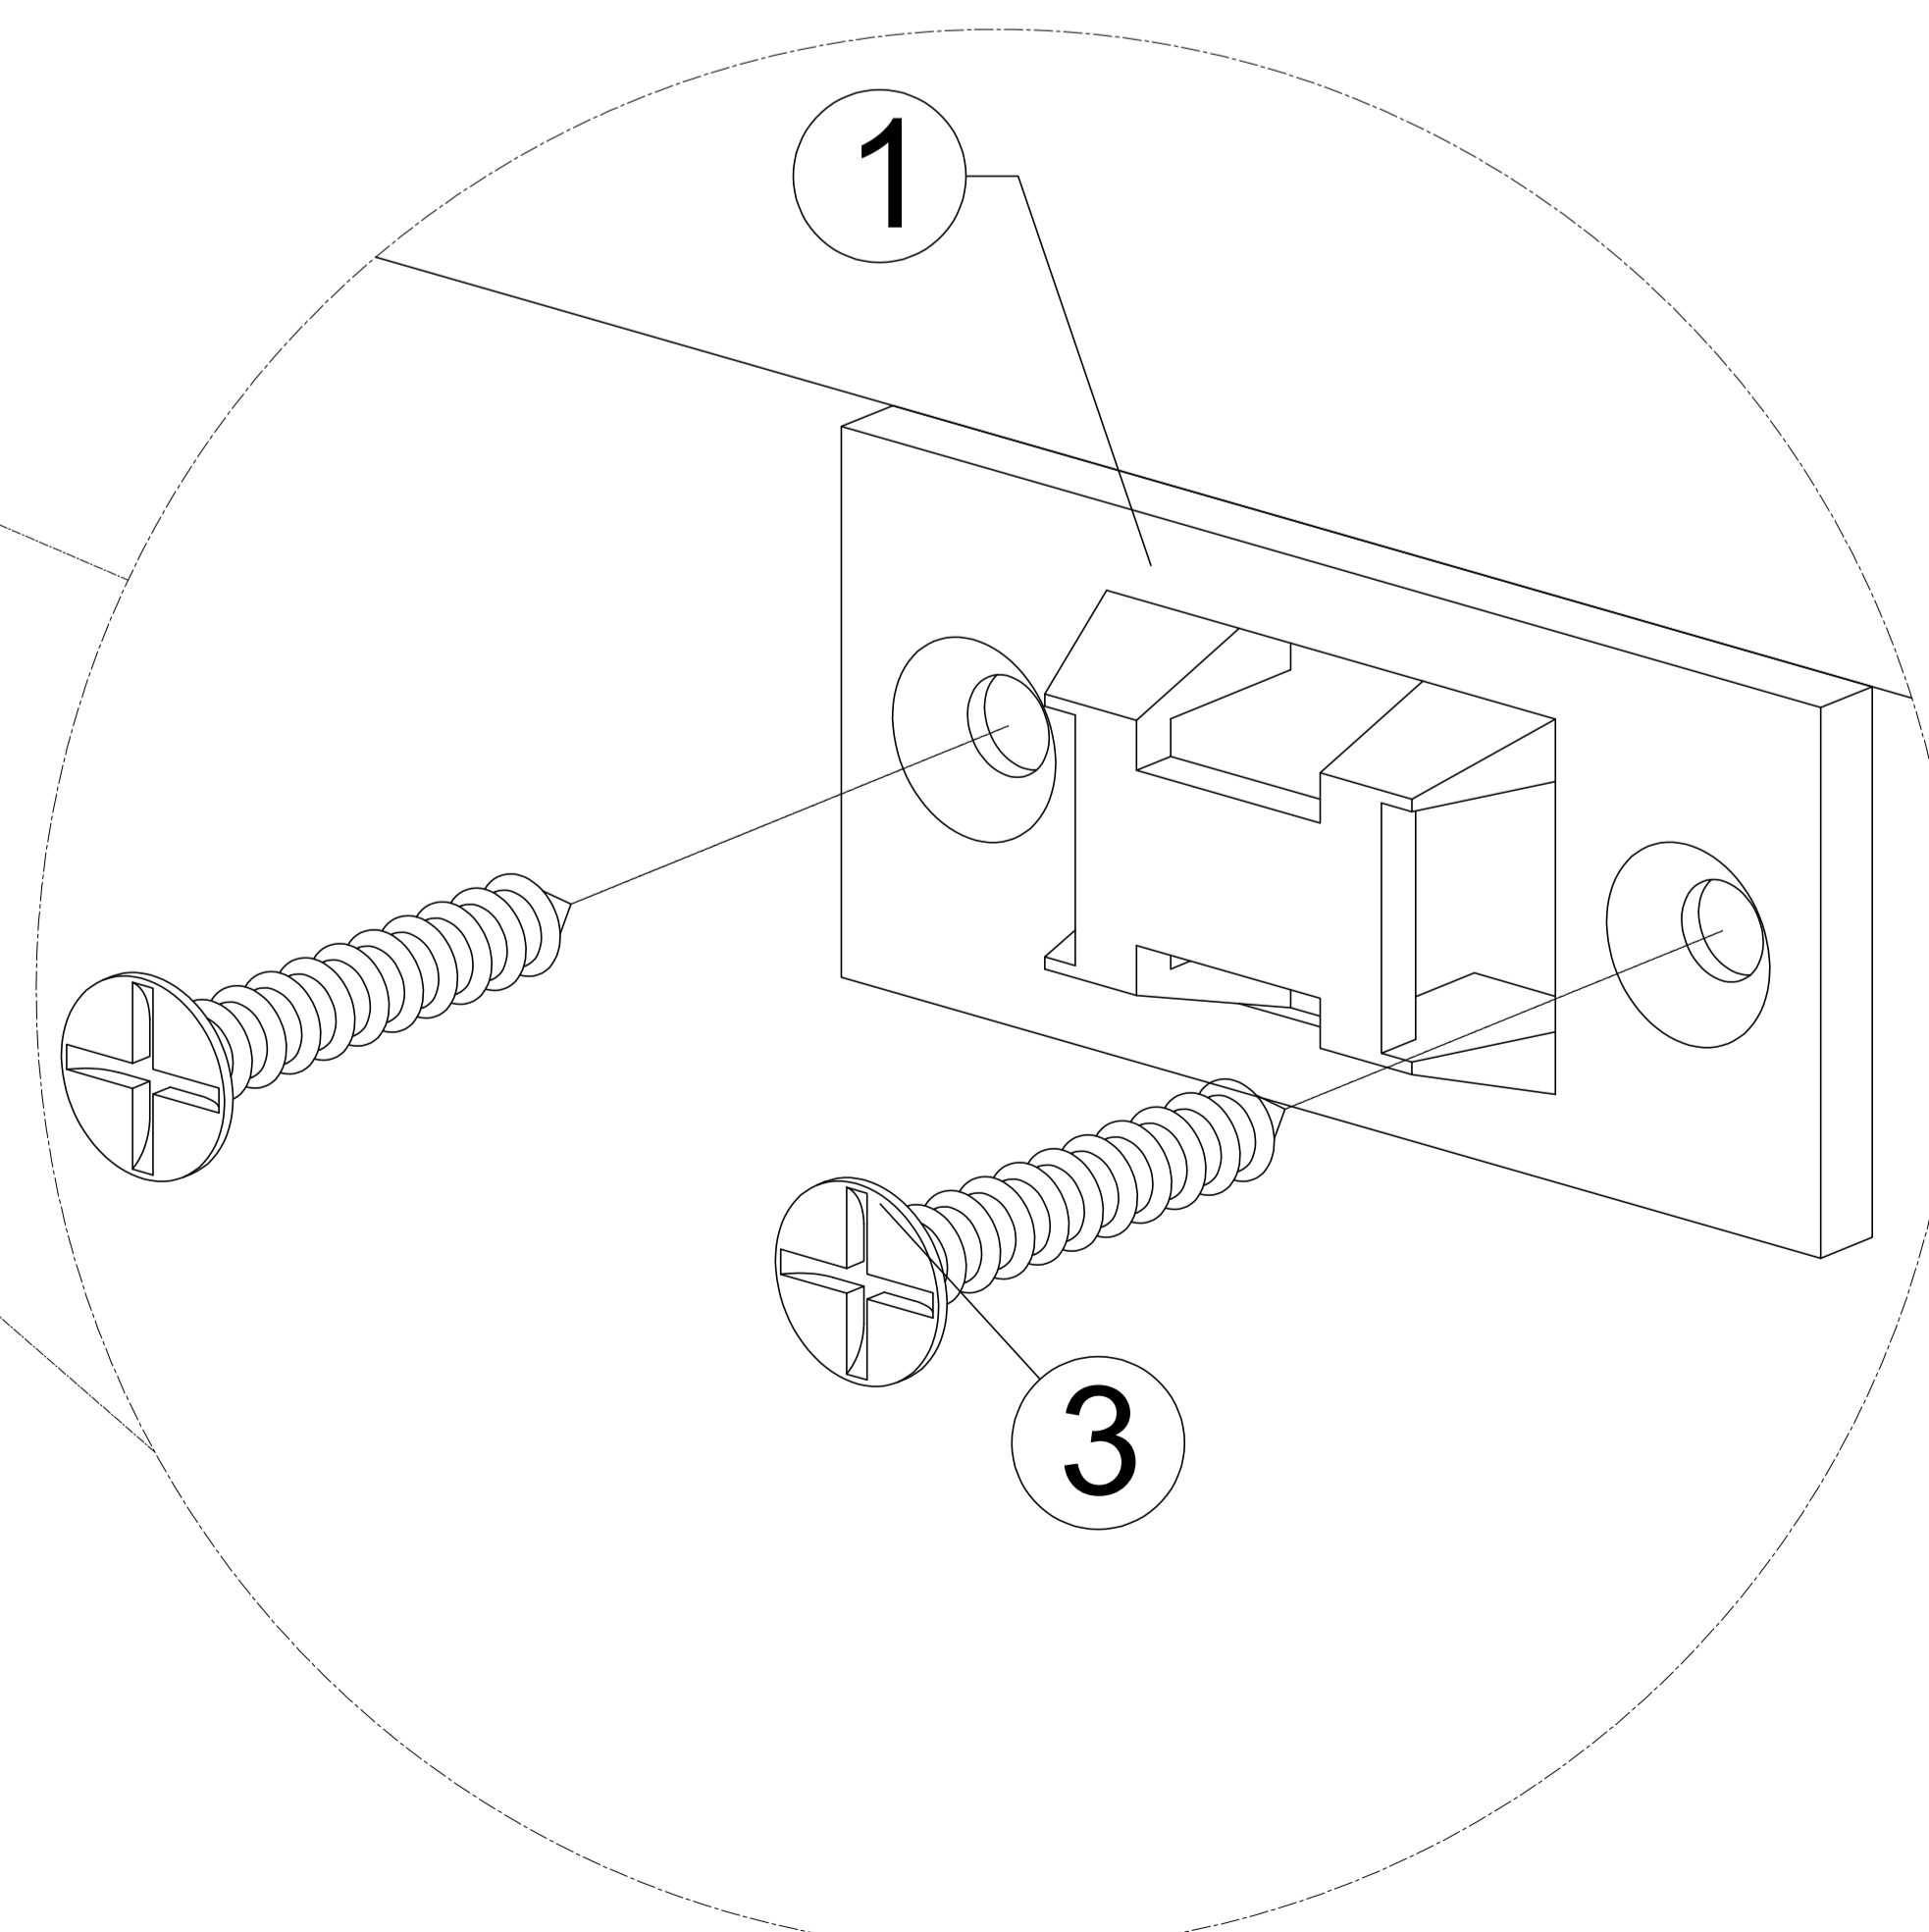


No	Name of Hardware	Q.ty
①	Plastic bracket 	4
②	Tie 	2
③	Screw Ø4x20 	4

1

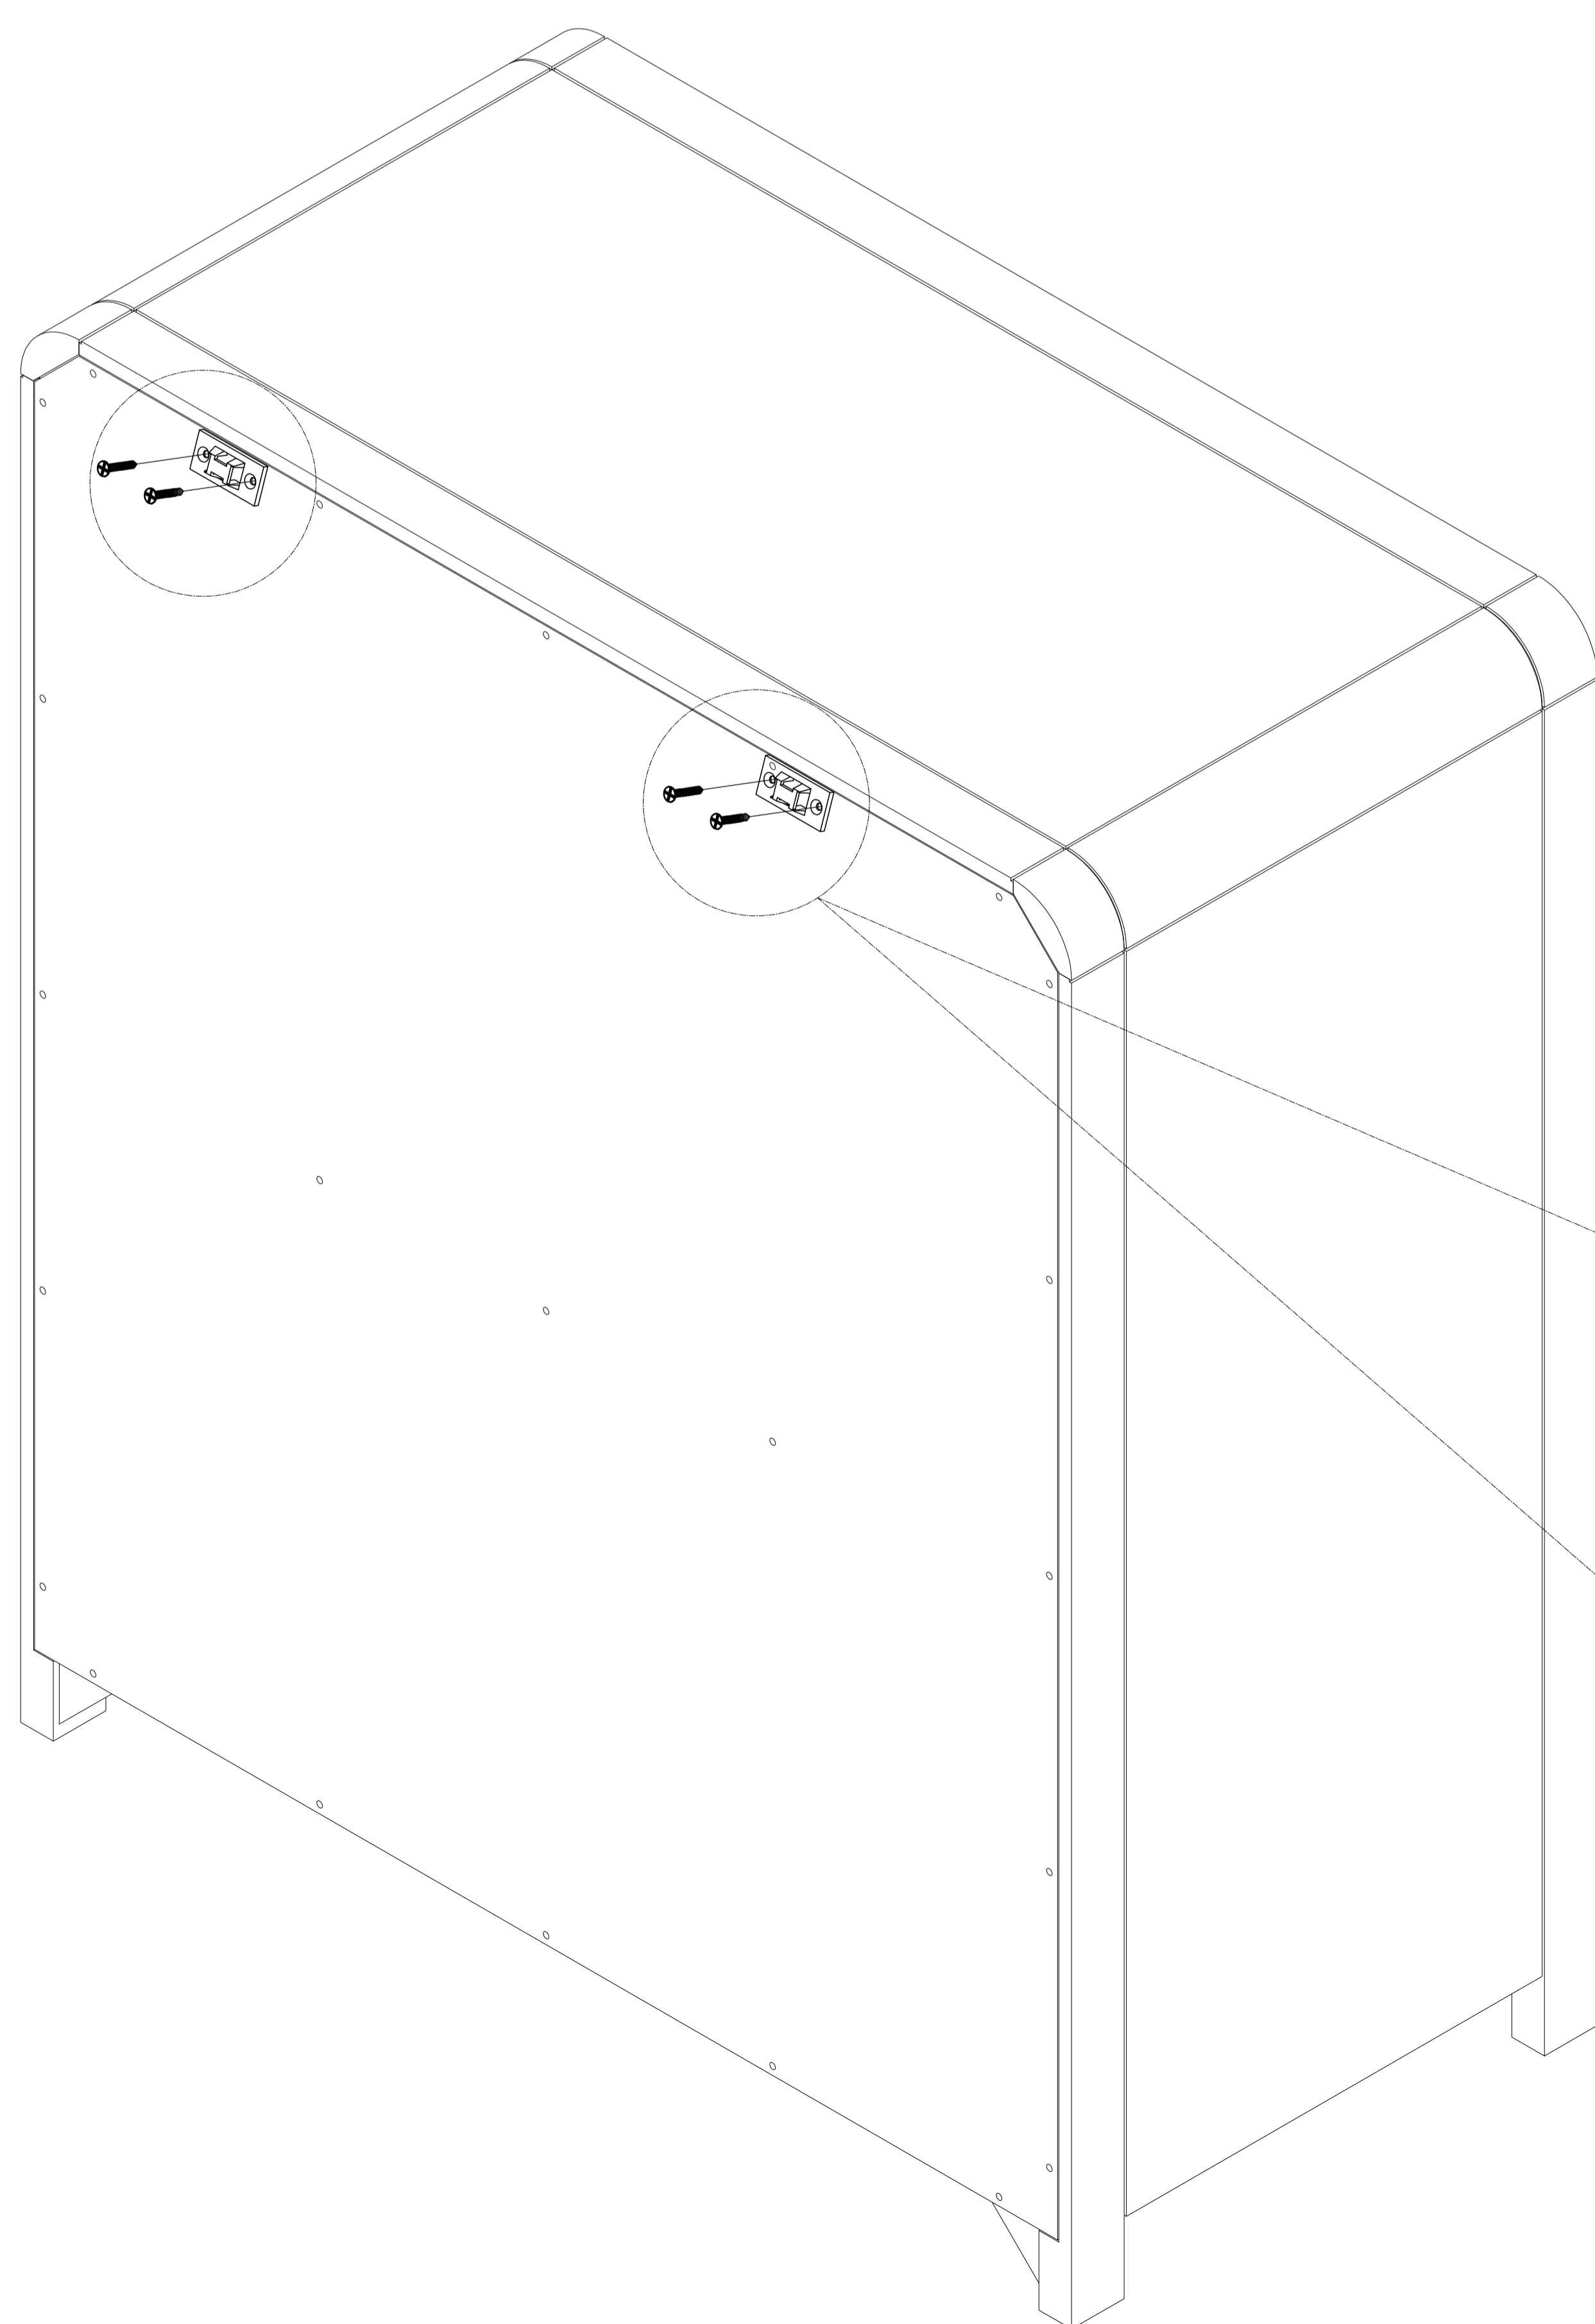

2

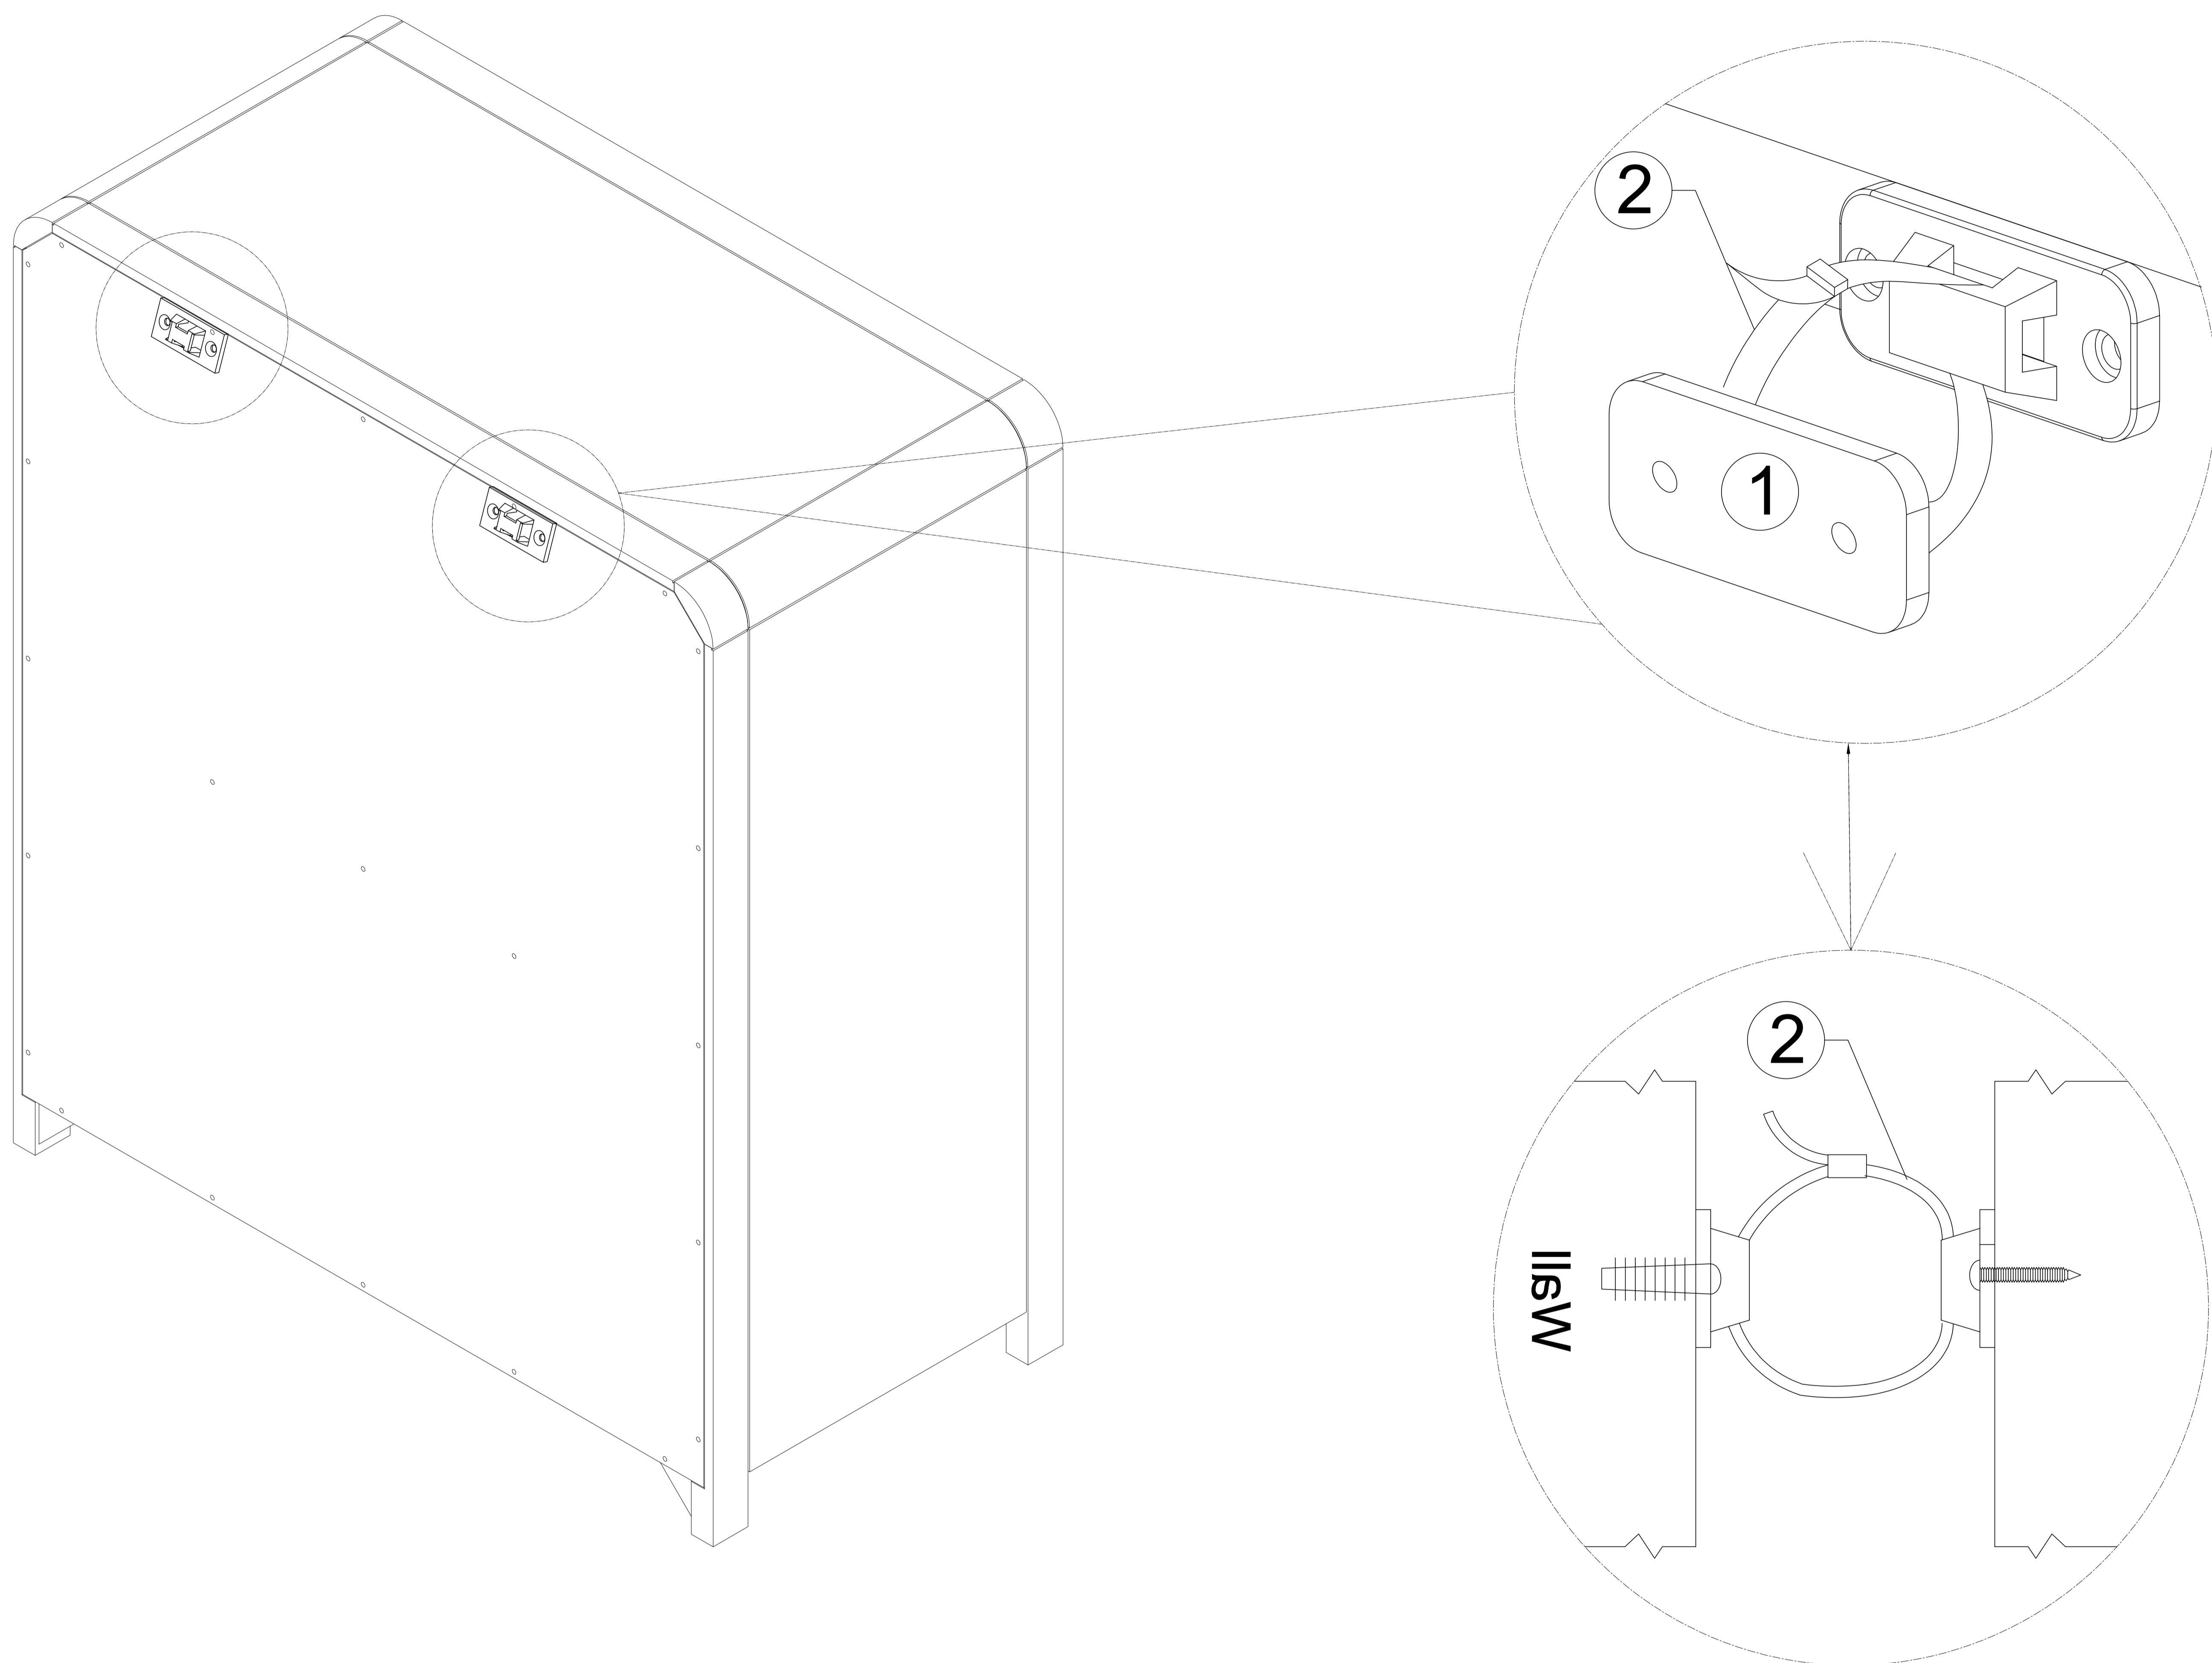

 <b>WARNING</b>

<p><b>Children have died from furniture tipover.</b></p> <p>ALWAYS secure this furniture with an anchor device.</p> <p>Check anchors regularly</p> <p>Never allow children to stand, climb or hang on drawers, doors, or shelves.</p> <p>Use drawer locks to prevent children climbing.</p> <p>Never open more than one drawer at a time.</p> <p>Place heavy items down low.</p> <p>Never place a television on this furniture.</p>
<p>C1 Clothing Storage &amp; Bookcase</p>