

SMART
COMFORT

NOVA

MASSAGE CHAIR



QUICK START GUIDE &
OPERATING INSTRUCTIONS

QUICK START GUIDE

1

Remove any items from pockets and sit into the chair in a comfortable position.


2

Press the power button, and the chair will begin reclining. The massage rollers will adjust automatically and the automatic mode “Fast Massage” will begin after 35 seconds.


3

You can enjoy the massage as it is, or read these operating instructions to learn about more advanced operation.

BASIC CONTROLS

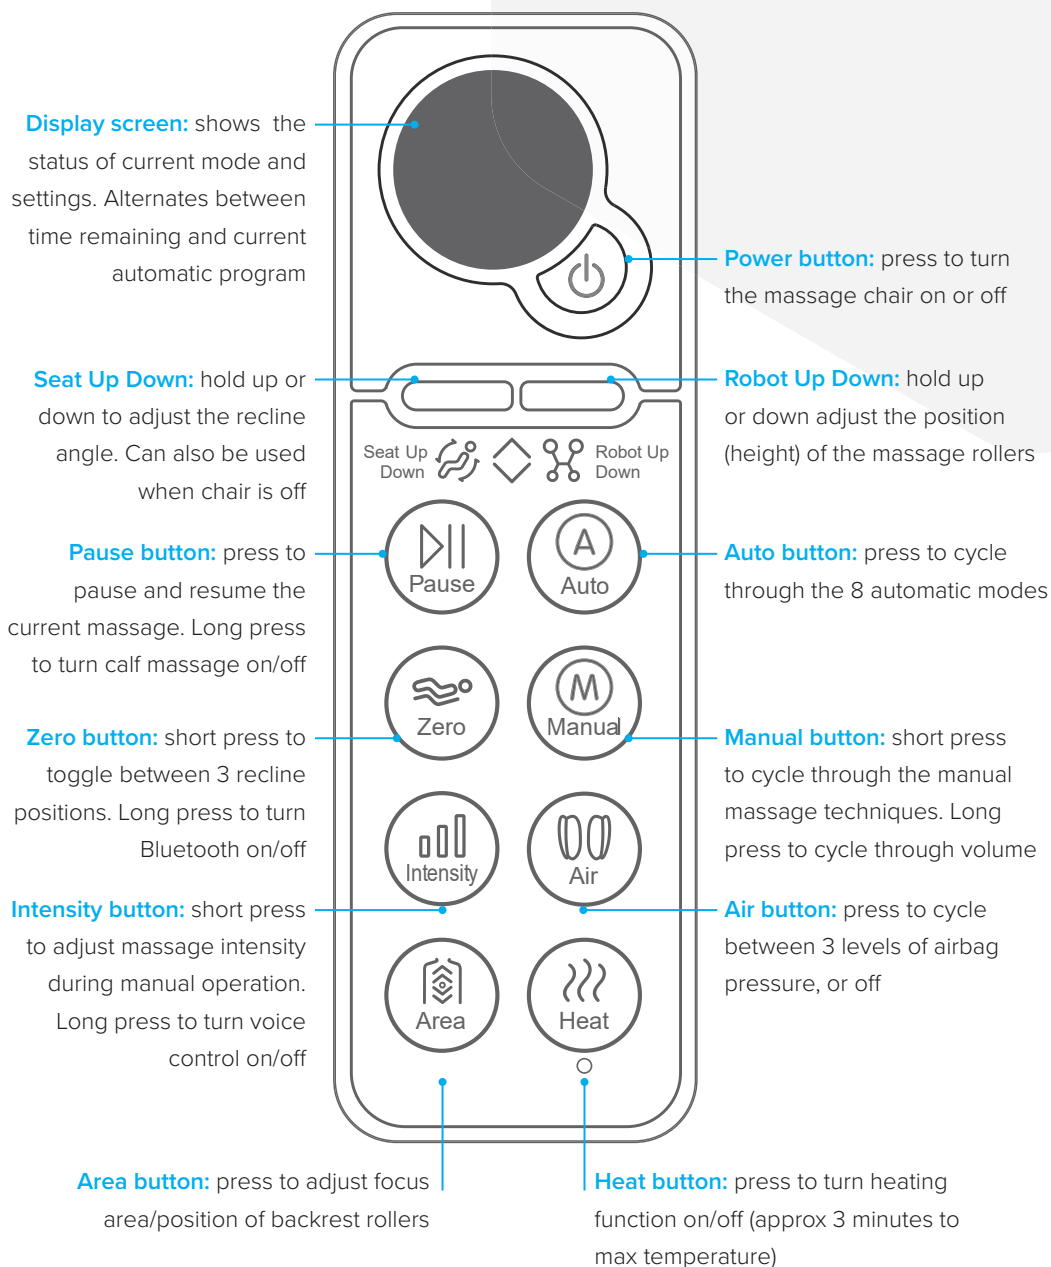

AUTOMATIC MODE CONTROLS

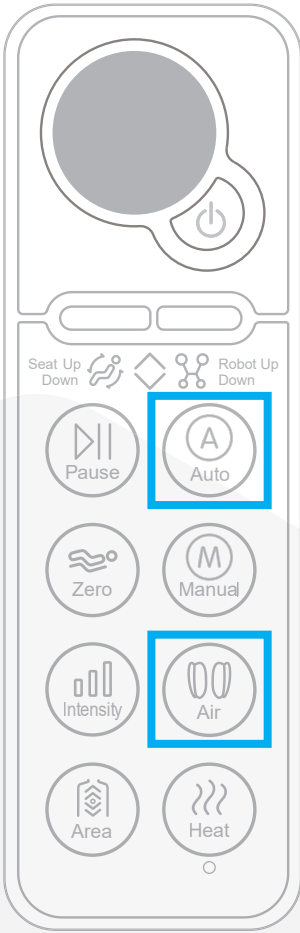


- **Auto button** cycles between eight automatic modes. The selected mode is indicated by the LED display screen:

Mode	Description	Screen Display
Auto 1	Fast Massage	<i>R1</i>
Auto 2	Comfort Massage	<i>R2</i>
Auto 3	Relax Massage	<i>R3</i>
Auto 4	Full Body Massage	<i>R4</i>
Auto 5	Neck & Shoulder Care	<i>R5</i>
Auto 6	Back & Waist Massage	<i>R6</i>
Auto 7	Goodnight Sleep Massage	<i>R7</i>
Auto 8	Sports Recovery	<i>R8</i>

- **Air button** cycles between three airbag intensity settings, indicated on the screen with *R1*, *R2* and *R3* - or off (*R0*)

MANUAL MODE CONTROLS

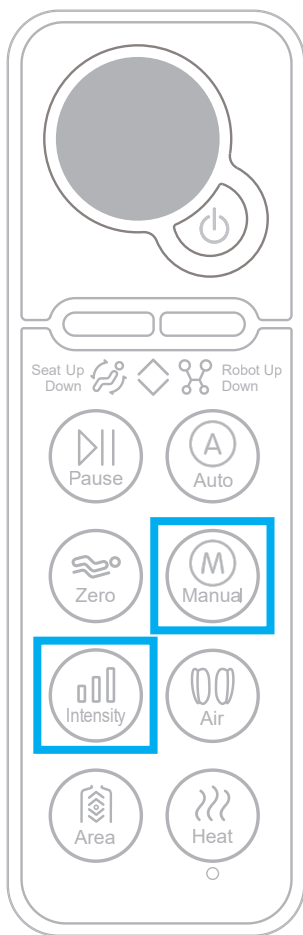

- **Manual button** cycles between back roller techniques. The selected mode is indicated by an “S” code on the screen:

Mode	LEDs Display
Off	50
Kneading	51
Tapping	52
Kneading + Tapping	53
Shiatsu	54
Knocking	55

- **Intensity button** cycles between three back roller intensity settings, indicated on the screen with *P1*, *P2* and *P3*.

MANUAL CONTROLS





-  **Message area button**
cycles between five different back roller position options. The selected mode is indicated by the LED display screen:

Mode	Screen Display
Message in fixed position (adjustable)	H0
Message up and down a short distance (adjustable)	H1
Upper back area	H2
Lower back area	H3
Full length of back area	H4

- **The Up and Down button**
can be used to adjust the massage rollers position during *H0* and *H1* modes

ROTATING THE FOOTREST

The footrest can be rotated 180 degrees to store away when not in use. To rotate the footrest, simply pull down from the top or the bottom to rotate into desired position.

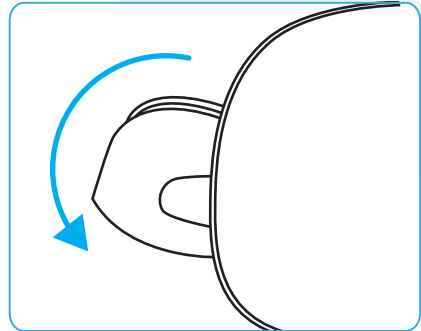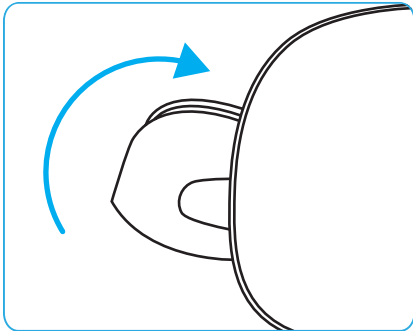

BLUETOOTH AUDIO

To play music or other audio through the Bluetooth speakers, go to the Bluetooth settings menu on your phone or device.

Search for a new device, look for “SMART COMFORT-0000” or similar and choose ‘connect’ or ‘pair’.

You can then play music using your regular media player app.

A large, light gray abstract shape with rounded corners, resembling a stylized mountain or a modern architectural element, positioned on the left side of the page. It has a flat top and a rounded bottom right corner, extending from the middle of the page down to the bottom edge.

VOICE CONTROL

To control the chair using voice commands, say the phrase “Hi Alice” and wait for the chair to respond “I am here”. You can then give the following voice commands to activate the desired settings:


Say this:	To do this:
“Hi Alice”	Prompt the chair to listen for a voice command
“Massage on”	Start the massage
“Massage off”	Stop the massage
“Fast Massage”	Change to Fast Massage automatic massage program
“Comfort Massage”	Change to Comfort automatic massage program
“Relax Massage”	Change to Relax automatic massage program
“Full Body Massage”	Change to Full Body automatic massage program
“Neck & Shoulder Care”	Change to Neck & Shoulder Care automatic program
“Back And Waist Massage”	Change to Back & Waist automatic program
“Goodnight Sleep”	Change to Good Night Sleep automatic program
“Sport Recovery”	Change to Sports Recovery automatic program
“Airbags on”	Turn airbags on
“Airbags off”	Turn airbags off
“Seat position up”	Recline the chair upwards slightly
“Seat position down”	Recline the chair backwards slightly
“Change the mode”	Change to from automatic mode to manual operation
“Fixed massage”	Change to fixed point massage mode
“Move up”	Move back massage rollers down slightly (during Partial/Fixed Point manual mode)
“Move down”	Move back massage rollers up slightly (during Partial/Fixed Point manual mode)
“Stop adjustment”	Stop the back roller adjustment
“Increase the Volume”	Raise the speaker volume for Bluetooth audio
“Reduce the Volume”	Lower the speaker volume for Bluetooth audio







NOVA MASSAGE CHAIR

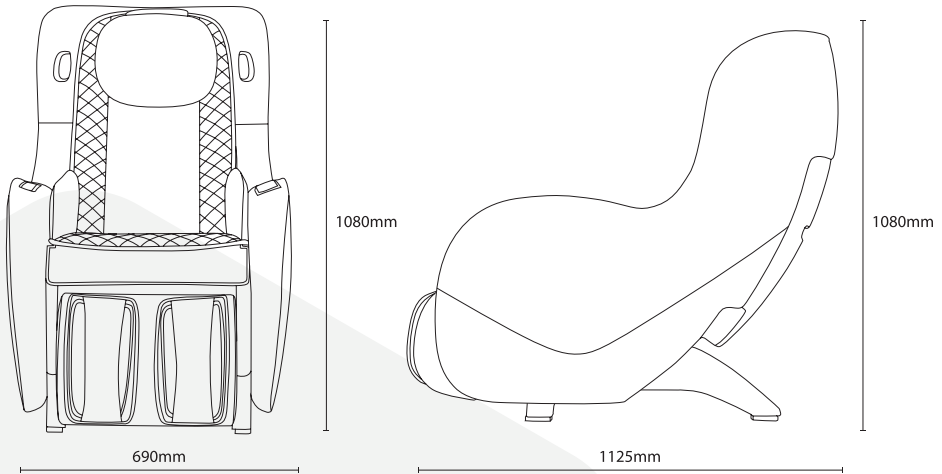

Health and Safety Warnings: Do not drop or push anything into any slot of the machine. Please stop immediately and consult your doctor if you feel unwell when using this machine. Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised.

Do not use if you are pregnant, unwell, or have a pre-existing medical condition.

Do not sit on the back, armrest, or the leg rest as it may result in damage or injury.

Do not press or put your hands into the cloth cover of the massage hands.

Children should be supervised to ensure that they do not play with the product.