

ASSEMBLY INSTRUCTIONS



Model: 281610



WARNING! ENTRAPMENT OR CRUSHING RISK

Ensure there is no person, animal or item obstructing the area under the footrest before operating this device.



SAFETY INSTRUCTIONS

Please read these instructions carefully before operating.

- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.



ELECTRICAL SAFETY

Please read these instructions carefully before operating.

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).

ASSEMBLY INSTRUCTIONS


Please read these instructions carefully before assembling.

- Assemble this product in an open space with room to move. Both the 2.5 Seater and 2.5 Seater + Chaise have 3 pieces.

Recliner - Arm Chair (A)

2.5 Seater - 1-Arm Chair (B), Console (C) and 1-Arm Chair (B).

2.5 Seater + Chaise - 1-Arm Chair (B), Armless Chair (D) and Chaise (E).

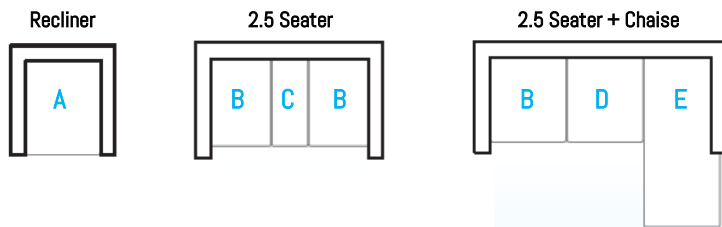


- The suite pieces need to have feet attached. These are located in the zipped pocket underneath each piece. Attach each foot with 1 screw as per the following instructions. Be careful when rotating to avoid damage to the product.

Attaching feet to Recliner (A)

Part list		
A		2
B		2
C		2
D		4
E		4
F		1


Remove the feet from the zippered compartment found in the bottom of the product.

Use the allen key at 1, 2, 3 & 4 of the diagram to remove the wooden slats with bolts & plastic pads attached.

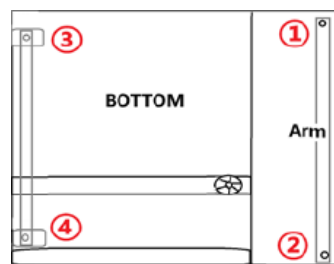

Attach the angled plastic feet to each corner using 1 bolt and 1 washer each, per the diagram.

Attach the cylinder shaped feet in the center using the attached bolt on each foot.

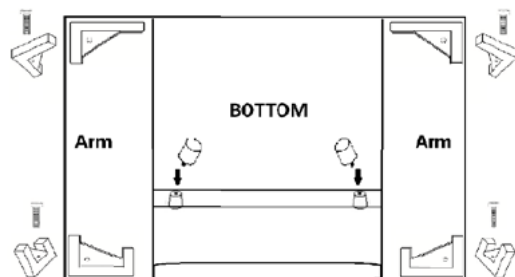


Attaching feet to end seats (B)


Part list		
A		1
B		1
C		3
D		2
E		2
F		1

Remove the feet from the zippered compartment found in the bottom of the product.

Use the allen key at 1, 2, 3 & 4 of the diagram to remove the wooden slats with bolts & plastic pads attached.

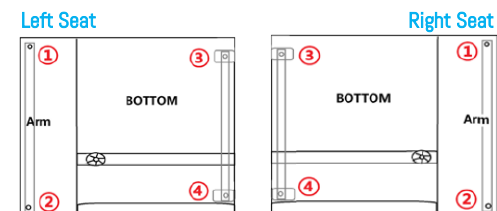

Attach the angled plastic feet to the outer corners using 1 bolt and 1 washer each, per the diagram below. Attach the 3 cylinder shaped feet in the center and inner corners, using the attached bolt on each foot.

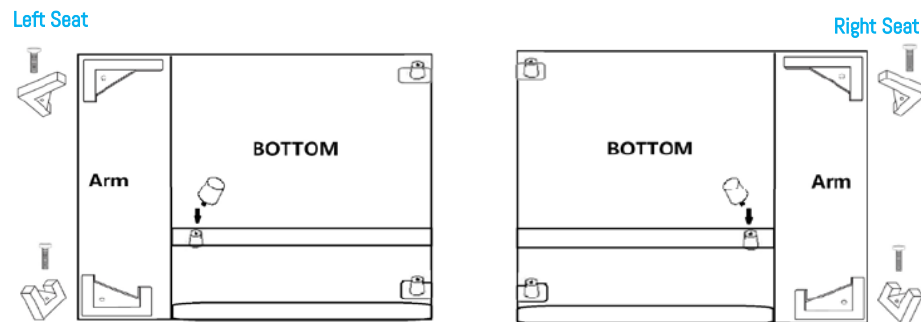


Attaching feet to center console (C) or armless chair (D)





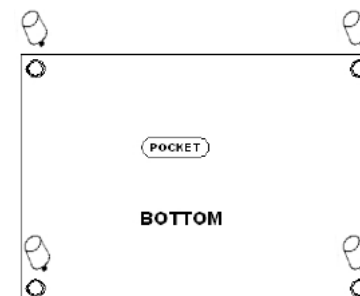


Part list		
A		4

Remove the feet from the zippered compartment found in the bottom of the product.

Attach the cylinder shaped feet in the corners using the attached bolt on each foot.




Attaching feet to chaise (E)

Part list		
A		1
B		2
C		2
D		4
E		4
F		1
G		1

Remove the feet from the zippered compartment found in the bottom of the product.

Attach the angled plastic feet to the outer and arm corners using 1 bolt and 1 washer each, per the diagram below.

Attach the 2 cylinder shaped feet in the center and inner corners, using the attached bolt on each foot.

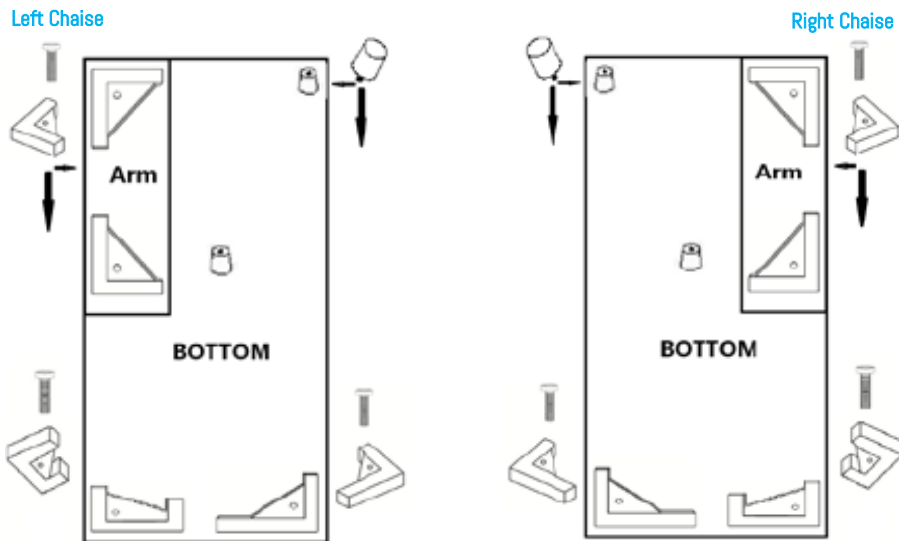

- Connect the pieces together using the brackets (Figure 1) down the side of each piece.
2.5 Seater - Connect both 1-Arm Chairs (B) to the Console (C).
2.5 Seater + Chaise - Connect the 1-Arm Chair (B) and the Chaise (E) to the Armless Chair (D).
- At the rear of the suites, connect the power supply cords.

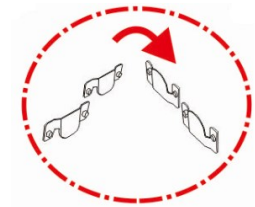


Figure 1



Figure 2

For the 2.5 + Chaise there are 4 power supply cords to connect (Figure 2).

A1 - Connect the two power supply cords with separate transformer boxes to the two outside seat outlets and then to a wall outlet.

B1 - Connect the power supply cord **without** a separate transformer box to the middle seat. Connect to a wall outlet.

***NOTE** - The power supply cord **without** the separate transformer box must only be connected to the middle seat.

C1 - Connect the power supply cord coming out from underneath the middle seat to a wall outlet.

The 2.5 Seater has the same **A1** and **B1** power supply connections as the 2.5 Seater + Chaise, but does not have power supply connection **C1**.

The recliner has one power supply with separate transformer **A1** to connect to the rear corner of the suite (Figure 3).

- Ensure all cords are firmly connected before turning the wall outlets on. Check that all the red switches at the rear of the suite are switched on and lit up.

- Your suite assembly is now complete and ready to be used. Please read the safety instructions before operating.



Figure 3

OPERATION INSTRUCTIONS

Wireless Charger (2.5 Seater Only)

A wireless charger is located under the 2.5 Seater tray table. Its location is indicated by a sticker (Figure 4). The sticker can be removed once you are familiar with the location.

To wirelessly charge your device, first ensure your device is compatible. This can be checked in the device's specifications or on the manufacturer's website.

If wireless charging compatible, place your device on the tray table and the charging icon will display on your screen.

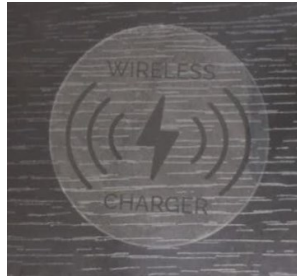


Figure 4

Charge Station (2.5 Seater + Chaise Only)

A Charge Station is located in the drop down table of the 2.5 Seater + Chaise (Figure 5). There are 2 x 240V outlets and 2 x USB ports.

For larger devices such as tablets and laptops, we recommend using the 240V outlets to charge.



Figure 5

Pull Out Armrest (All)

The left arm facing armrest on the Recliner and both armrests on the 2.5 Seater and 2.5 Seater + Chaise feature a pull out armrest (Figure 6). The pull out armrest includes a cup holder, USB charger and magazine holder.

To access this functionality, insert your thumb into the gap down the outside of the seat and push outwards. This has been designed to require minimal force.

There is enough clearance to keep a USB cable plugged into the charger even when the armrest is closed so you can continue to use the charger.



Figure 6

TROUBLESHOOTING

If you are having any issues please try the following solutions.

- Unplug the suite for 5 minutes to reset all electrical components.
- The USB ports on the charge station and in the armrest are low voltage. Please use the 240V socket if you are charging a larger device or require a faster charge.
- The wireless charger is compatible with Qi wireless devices. Check your device specifications to confirm if it is wireless charging compatible. Wireless charging is available on Apple iPhone 8 + later and Samsung Galaxy S7 + later devices.
- Check that all plugs are plugged into the wall outlet and are secure. Please check that the wall outlet is switched on. Check the red switches at the rear of the suite are on.
- Check to ensure that all connection cords are properly connected, as per the step by step instructions. There are multiple connections, any of which being too loose may cause performance issues.
- Ensure no cords are pulled too tight. If the cord does not reach its destination with ease you may be trying to plug it into the wrong location. Please refer back to the step by step instructions to double check. If it is still too short/tight, please contact the store you purchased the suite from.
- Ensure there is nothing obstructing the recliner movement.
- Try plugging the suite into a different power outlet.
- Please check all connections before contacting the store for more help.

If the suite continues to fail please contact the store from which it was purchased from.

Synargy is a registered responsible supplier on ERAC. Electrical components within our products have been tested and comply with all legal requirements imposed for electrical safety and EMC.

Synargy[®]
Furniture that fits your life