



Carabell Modular Lounge

Assembly Instructions

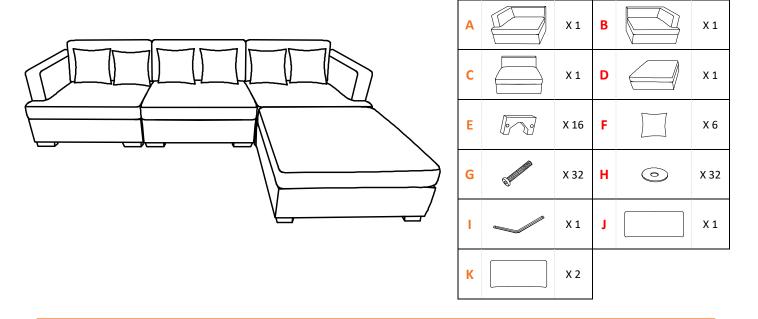

Attach the feet (E) to the bottom of each base piece (A, B, C & D). The feet are located in a zippered pocket on the underside of each base piece. Use 2 bolts (G) and washers (H) per foot using the pre-drilled holes.

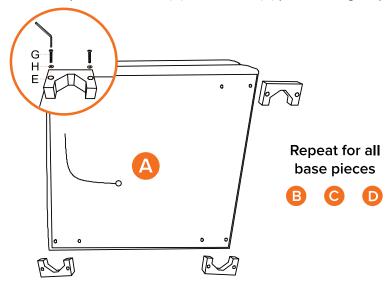

Move the seat bases into place as desired. The non-slip feet will keep them in place. Put seat back cushions (J) & (K) in place, and add scatter cushions (F) to complete.

