
SOFA LEGS and CLIP SYSTEM ASSEMBLY INSTRUCTIONS FOR MODEL 6395

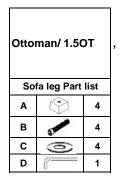

Armless Chair / A1.5P				
5	Sofa leg Part list			
Α	\odot	4		
В	975	4		
С	0	4		
D	f	1		

Wedge	Wedge/ WB			
Sof	Sofa leg Part list			
Α	\odot	4		
В	97	4		
С	0	4		
D		1		

Armless Chair / A1.5P				
Sofa leg Part list				
Α	\bigcirc	4		
В	9	4		
С	(0)	4		
D	1	1		

Joining clips Part list

(Intract)

12

4

В

С

	-	rm Chair / ir / R1.5F		
Sof	a leg Part	list		
Α	8	2		
В	(2)	2		
С	97	6		
D	0	6		
E		1		
Joining clips Part list				
Α		2		
В	(Demonino	4		
С	(prinzet-	4		
			•	

Joining clips Part list			
Α		2	
В	Dominimo	12	
С	(Jacksonte-	4	
D		2	

Joining clips Part list			
Α		2	
В	(Dominion)	12	
С	(Jackstate)	4	
D	• 0	2	

Joining clips Part list			
Α		2	
В	(Dominion)	12	
С	(Jastanact-	4	
D	• 0	2	
E	*	1	

T	WE	A1.5P		RW1P / R1.5P	
	POCKET	POCKE		POCKET	
		0	•		
A1.5P	(POCKET)	•			2X 2X
			(S)		\$ ■
1.5OT	(POCKET)			A	B B
					<u> </u>

Feet and optional connecting brackets are located in the zipped compartment on the underside of each piece.

- Step 1: Take the legs and joining clips out of the zippered compartment found in the bottom of the product.
- **Step 2:** Take the screwdriver out of the small box inside the zipper pocket of Wedge piece / W.
- Step 3: Attach each leg with 1 or 2 screws to the corners of the product as illustrated, lock it with a screwdriver.
- Step 4: Attach each A Clip with 4 bolts, and attach each B Clip with 2 bolts and 2 screws as illustrated, lock it with a screwdriver.
- **Step 5:** Carefully turn the product upright to avoid damage.